

ASSEMBLY INSTRUCTIONS

STEP 1



UNPACK THE BOX AND REMOVE ALL CONTENTS:

- 2× wall-mounting profiles
- 2× locking pins
- 1× wooden board with frame
- 12× screws and wall plugs (anchors)

STEP 2




PREPARE THE NECESSARY TOOLS:

Drill, Screwdriver, Measuring tape, Pencil, Spirit level, Drill bit set, Vacuum cleaner

If you are unsure about the installation, please contact a professional.

STEP 3

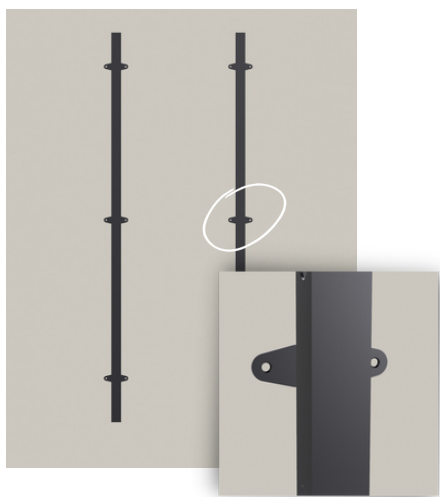

FIXING THE PROFILES TO THE WALL_1

Place one of the profiles against the wall at the position where the structure will be mounted.

Using a spirit level or a cross-line laser, align the profile to a vertical position.

Using a pencil or a center punch, mark the center points of each hole intended for fixing the profile to the wall.

STEP 4



WALL MOUNTING OF THE PROFILES_2

Using a drill, make holes at the marked points. The depth of each hole should be at least 60 mm.

STEP 5




FIXING THE PROFILES TO THE WALL_3

Insert the wall plugs supplied into the drilled holes. Place the profile against the wall and tighten the screws.

Use only the wall plugs and screws supplied with the package for mounting.

STEP 6

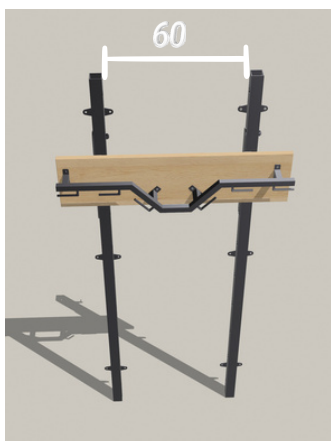

FIXING THE SECOND PROFILE TO THE WALL_1

Place the second profile against the wall and set the distance between the profiles to 60 cm. Check the distance at both the bottom and the top of the structure.

It is the internal distance between the profiles.

STEP 7



MOUNTING THE SECOND PROFILE TO THE WALL_2

To mount the second profile, repeat steps 4 and 5.


STEP 8



INSTALLING THE BOARD ONTO THE FRAME

At an angle of approximately 45°, slide the board into the wall-mounted profiles.

STEP 10

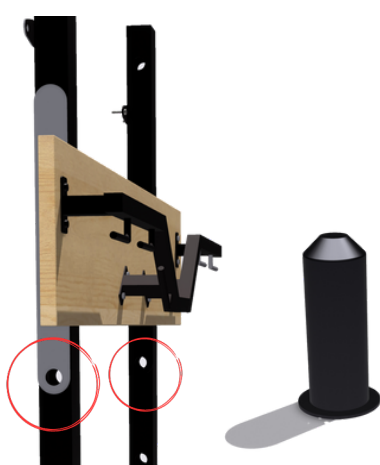

SECURING THE WOODEN BOARD

Insert the locking pin into the marked hole to prevent movement of the wooden board.